 


 







Originale	Sostituto
 Power	 Power
 Blue/3D	 Blue / Prime Video / Random
 Yellow/Source	 Yellow / YouTube / Repeat
 Setup/Media	 Setup / OPT /
 Green/Mode	 Green / APP / Repeat
 Hide	 TV/Radio /
 Zoom	 Zoom / Size
 Ratio	 Picture / Format
 Freeze	 Pause / Step / Freeze
 Keystone Up	 CH+ / Page+
 Up	 Up
 Right	 Right
 Left	 Left
 Menu	 Menu / Home
 Down	 Down
 Keystone Down	 CH- / Page-
 1/Left/Right	 1

Originale	Sostituto
 2/Stop/Back	 2
 3/Play/Pause/Enter	 3
 PgUp/Right/Left	 >> / Preset+
 4/VGA	 4
 5/Component	 5
 6/Video	 6
 PgDn/S-Video	 << / Preset-
 7/SD/USB A	 7
 8/HDMI/MHL	 8
 9/LAN/WiFi	 9
 0/USB B	 0

