

 


 



 






















 
 




Originale	Sostituto
 Power	 Power
 Set Up	 Setup / OPT /
 Mute	 Mute / Dimmer
 PC	 Shift + Fav / Marker / PC
 Music	 Sound / Title
 Video	 Shift + 4
 Picture	 Picture / Format
 TV	 TV/Radio /
 FM	 Shift + 6
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Eject	 Eject / Surround

Originale	Sostituto
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Slide / Language	 Shift + Audio / Lang I/II
 Subtitle / Rotate	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Back	 Back / Return
 Mem	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Memo+	 Shift + CH+ /
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Memo-	 Shift + CH- /

Page-





Originale		Sostituto		Originale		Sostituto	
	Vol-		Vol-				
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	*		Guide / EPG / -/--				
	0		0				
	#		Fav / Marker / PC				

