



Originale		Sostituto		Originale		Sostituto	
	POWER		Power		ANGLE		Info / Angle
	SOURCE		AV / Input / RDS		AUDIO		Audio / Lang I/II
	DVD/CARD/USB		Smart / List		PBC		Picture / Format
	MUTE		Mute / Dimmer		TITLE		Sound / Title
	1		1		UP		Up
	2		2		STOP		Stop / Hold
	3		3		PLAY/PAUSE		Play / Slow
	4		4		LEFT		Left
	5		5		ENTER		OK
	6		6		RIGHT		Right
	7		7		MODE		D.Menu / Top
	8		8		SETUP		Setup / OPT /
	9		9		DOWN		Down
	0		0		ZOOM		Zoom / Size
	10+		Guide / EPG / -/--		MENU		Menu / Home
	GOTO		Text / Goto		REPEAT		Green / APP / Repeat
	SUBTITLE		Subtitle / EQ		A-B		Yellow / YouTube / Repeat





	Originale	Sostituto	Originale	Sostituto
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		
	PROGRAM	 TV/Radio /		
	DISPLAY	 Display / Media		
	<<	 << / Tune-		
	>>	 >> / Tune+		

