 







































































Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Zoom		Zoom / Size
	Open/Close		Eject / Surround		0/10		0
	Goto		Shift + Text /		10+		Guide / EPG / -/-
	Step		Shift + Pause / Step /		A-B		Yellow / YouTube / Repeat
	Prog		TV/Radio /		OSD		Display / Media
	Mute		Mute / Dimmer		Repeat		Green / APP / Repeat
	1		1		Menu		Menu / Home
	2		2		Volume+		Vol+
	3		3		Angle		Info / Angle
	Audio		Audio / Lang I/II		Video		Shift + 4
	4		4		Slow		Shift + Play /
	5		5		Volume-		Vol-
	6		6		Setup		Setup / OPT /
	Subtitle		Subtitle / EQ		Up		Up
	7		7		L/R		Text / Goto
	8		8		Left		Left
	9		9		Enter		OK





	Originale	Sostituto	Originale	Sostituto
		+		

