


 

 

 

 

 



 




 






 



 

 
 
 
 
 
 
 




Originale	Sostituto
 POWER	 Power
 MUTE	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Back
 VOL+	 Vol +
 VOL-	 Vol -
 NICAM	 Smart

Originale	Sostituto
 INFO	 Info
 TV/RADIO	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 LCD MENU	 Menu
 DVB MENU	 D. Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 INPUT	 AV
 PMODE	 Shift + Format
 SMODE	 Dual
 SLEEP	 Sleep
 LIST	 List
 FAV	 Pre Ch





Originale		Sostituto		Originale		Sostituto	
	PAGE-		<<				
	PAGE+		>>				
	TEXT		Text				
	HOLD		Options				
	EXIT		Exit				
	EPG		Shift + Guide				
	INDEX		3D				
	SUBTITLE		Subt				
	SIZE		Format				
	REVEAL		Media				
	RED		Red				
	GREEN/AUDIO		Green				
	YELLOW/PAUSE		Yellow				
	BLUE		Blue				

