





























 











 




 








Originale	Sostituto	Originale	Sostituto
	Power		Power
	Tv/Radio		TV/Radio /
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	Recall		Back / Return
	FAV		Fav / Marker / PC
	TTX		Text / Goto
	Subtitle		Subtitle / EQ

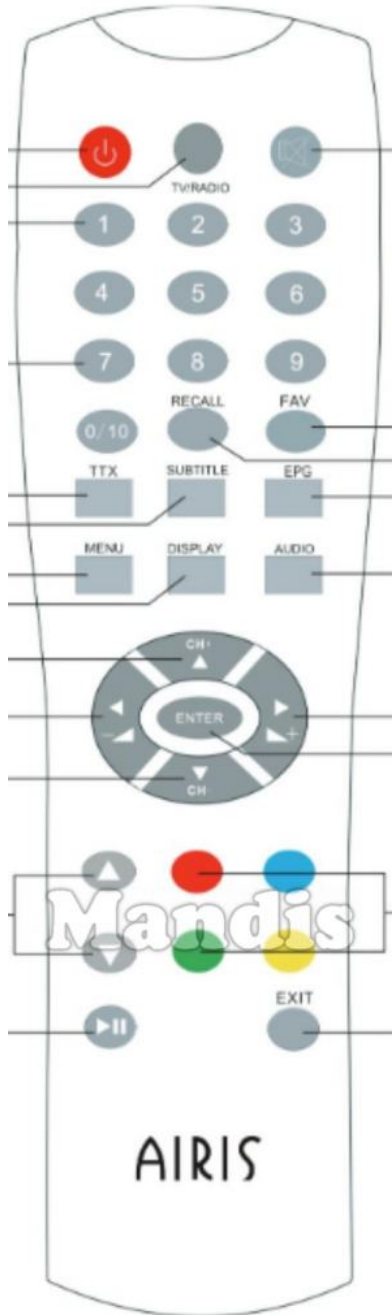Originale	Sostituto	Originale	Sostituto
	EPG		Guide / EPG / -/--
	Menu		Menu / Home
	Display		Display / Media
	Audio		Audio / Lang I/II
	Left		Left
	Vol-		Vol-
	Up/CH+		Up
	Right		Right
	Vol+		Vol+
	Enter		OK
	Down/CH-		Down
	▲		CH+ / Page+
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	▼		CH- / Page-
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





Originale	Sostituto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear

Originale	Sostituto

