























 





 









Originale	Sostituto
	 Power
	 Yellow / YouTube / Repeat
	 Exit / Cancel / Clear
	 Eject / Surround
	 Sleep / Timer
	 Shift + Pause / Step /
	 TV/Radio /
	 Mute / Dimmer
	 1
	 2
	 3
	 Audio / Lang I/II
	 4
	 5
	 6
	 Subtitle / EQ
	 7

Originale	Sostituto
	 8
	 9
	 Zoom / Size
	 0
	 Guide / EPG / -/-
	 Blue / Prime Video / Random
	 Display / Media
	 Back / Return
	 Green / APP / Repeat
	 Menu / Home
	 Vol+
	 Info / Angle
	 Shift + Eject / Surround
	 Shift + Play /
	 Vol-
	 Setup / OPT /
	 Up





Originale	Sostituto
L/R	D.Menu / Top
Left	Left
Enter	OK
Right	Right
Stop	Stop / Hold
Down	Down
Play	Play / Slow
N/P	Picture / Format
PBC	Smart / List
Title	Sound / Title
Pause/Step	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+

Originale	Sostituto

