 

 
 

 

 

 
 
 
 
 

 

 


 

 
 
 
 

 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Up	 Up
 Down	 Down
 Right/[≡o]	 Right
 Left/[≡+]	 Left
 Menu	 Menu
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Recall/[≡?]	 Pre Ch
 Sleep/[≡◆]	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4

Originale	Sostituto
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input/[ /≡]	 AV
 Normal/OK/[≡i]	 Ok
 [≡]	 Text
 [≡x]	 Format
 Red/Skip	 Red
 Green/Move	 Green
 Yellow/Delete	 Yellow
 Blue/Mode	 Blue

