


 






 


 



 





 



 



 



 



 



 


 
 

 

 



 
 

 
 
 


 



 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Function		Menu		7		7
	Play/<>/Preset		Play		8		8
	Stop/Clear		Stop		9		9
	Pause/Set		Pause		0		0
	>>I		>>I		+10		Guide
	Tuning >>		>>		Edit/Check		Info
	<< Tuning		<<		PRGM		Subt
	I<<		I<<		Random/Repeat		Text
	Disc Direct Play 1		Red		GEQ		Format
	Disc Direct Play 2		Green		T-Bass		Dual
	Disc Direct Play 3		Yellow		Timer		AV
	1		1		Sleep		Sleep
	2		2		Clock		Back
	3		3		Mono/Tuner		Media





Originale		Sostituto		Originale		Sostituto	
	Band		TV/R				
	Shift + Disc Direct Play 1		Smart				
	Shift + Disc Direct Play 2		Pre Ch				
	Shift + 5		Ok				

