



Originale	Sostituto
Power	Power
Shift Clear	+ Shift + Exit
Shift 6	+ Shift + 6
Muting	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10/0	0
+10	Guide
Clear	Exit
Clock	+ Shift + AV

Originale	Sostituto
Timer	AV
Tuner Mode	Media
Rev Mode	+ Shift + <<
Shuffle/Program	+ Shift + Sleep
Treble	Subt
Album/Preset	Up
Album/Preset	Down
>>/>>	>>
>>/>>	>>
<</<<	<<
<</<<	<<
Enter	Ok
Repeat	Text
Bass	Dual
Play/Pause CD	Play
Play/Pause CD	Pause
<> Tape	+ Shift + Play





Originale	Sostituto
 Stop	 Stop
 Tuner/Band	 Smart
 AUX	 Options
 Function	 Menu
 Display	 Info
 Dimmer	 D. Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Sleep	 Sleep
 Shift	 Pre Ch

Originale	Sostituto

