



Originale	Sostituto
Power	Power
Favorite Program	Pre Ch
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Tv/VCR	TV/R
AD-Skip	Guide
Rec/OTR	Rec
Eject	Eject
Play	Play

Originale	Sostituto
>>/F.FWD	>>
<</REW	<<
Pause/Still	Pause
Stop	Stop
Channel/Tracking +	Ch +
Channel/Tracking -	Ch -
Up	Up
Down	Down
Right	Right
Left	Left
OK/CLK/CNT	Ok
Clear	Exit
i/Menu	Menu
Speed	Smart
AV	AV
Rec End Search	3D
Child Lock	Media



