



Originale	Sostituto	Originale	Sostituto
Power	Power	Rec	Rec / Rec Mode
Tv/Radio	TV/Radio /	Stop	Stop / Hold
Red	Red / Netflix / Search	I<<	I<< / Preset-
Green	Green / APP / Repeat	FAV	Fav / Marker / PC
Yellow	Yellow / YouTube / Repeat	>>I/Index	>>I / Preset+
Blue	Blue / Prime Video / Random	Menu	Menu / Home
Subtitle	Subtitle / EQ	Up	Up
Text	Text / Goto	Source	AV / Input / RDS
Hold	Shift + Stop /	Left	Left
TVG	Guide / EPG / -/--	OK	OK
Audio	Audio / Lang I/II	Right	Right
Play	Play / Slow	Down	Down
Pause	Pause / Step / Freeze	Exit	Exit / Cancel / Clear
Size	Zoom / Size	Aspect	Picture / Format
<<	<< / Tune-	Vol+	Vol+
Subpage	Eject / Surround	Mute	Mute / Dimmer
>>	>> / Tune+	CH+	CH+ / Page+

Originale	Sostituto	Originale	Sostituto
Rec	Rec / Rec Mode	Stop	Stop / Hold
I<<	I<< / Preset-	FAV	Fav / Marker / PC
>>I/Index	>>I / Preset+	Menu	Menu / Home
Up	Up	Source	AV / Input / RDS
Left	Left	OK	OK
Right	Right	Down	Down
Exit	Exit / Cancel / Clear	Aspect	Picture / Format
Vol+	Vol+	Mute	Mute / Dimmer
CH+	CH+ / Page+		





Originale	Sostituto	Originale	Sostituto
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--	+	Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return

Originale	Sostituto

