

 

 

 

 

 

 





 

 

 

 

 



 

 





Originale	Sostituto
 Standby	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0
 Recall	 Back / Return
 Home	 Shift + Menu /
 e	 D.Menu / Top
 Mouse	 Smart / List

Originale	Sostituto
 Tv/Radio	 TV/Radio /
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 TXT	 Text / Goto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold





Originale		Sostituto	
 FAV/PC MIX	Mix/FAV List	 PC FAV MARKER	Fav / Marker / PC
 SUBTITLE SIZE	Size/Subtitle	 EQ SUBTITLE	Subtitle / EQ
 AUDIO CANCEL	Cancel/Audio	 LANG I/II AUDIO	Audio / Lang I/II
 REFRESH	Refresh	 OPT-TOOLS SETUP	Setup / OPT /
 INDEX	<</Index	 TUNE-	<< / Tune-
 HOLD	>>/Hold	 TUNE+	>> / Tune+
 REVEAL	I<</Reveal	 PRESET-	I<< / Preset-
 SUBPAGE	>>I/Subpage	 PRESET+	>>I / Preset+
 RED	Red	 NETFLIX SEARCH	Red / Netflix / Search
 GREEN	Green	 APP REPEAT	Green / APP / Repeat
 YELLOW	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 BLUE	Blue	 Prime Video RANDOM	Blue / Prime Video / Random

Originale		Sostituto	

