


 






 

Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Radio	 TV/R
 Recall / Mouse	 Back
 P.Mode	 Format
 S.Mode	 Dual
 Nicam / A2	 Shift + Dual

Originale	Sostituto
 Sleep	 Sleep
 Source	 AV
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Info	 Info
 Home	 Smart
 FAV	 Pre Ch
 Settings	 Options
 ASP	 List
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu





Originale	Sostituto
 Exit	 Exit
 I<< / Text	 I<<
 I<< / Text	 Text
 >>I / Subpage	 >>I
 << / Size	 <<
 >> / Reveal	 >>
 Play/Pause / Index	 Play
 Play/Pause / Index	 Pause
 Stop / Hold	 Stop
 Cancel	 Shift + Exit
 Subtitle	 Subt
 Repeat	 Shift + Text
 Auto	 3D
 A - B	 Eject
 Media	 Media
 Red	 Red
 Green	 Green

Originale	Sostituto
 Yellow	 Yellow
 Blue	 Blue

