



 



 


























 
 
 

 


 

 





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Audio / Nicam/A2	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 P Mode	 Picture / Format
 S Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Originale	Sostituto
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Shift + Pause / Step /
 Rec / Optional	 Shift + Rec / Rec Mode
 Rec / Optional	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home



