




























 






 






Originale	Sostituto	Originale	Sostituto
Power		Power	
Mute		Mute / Dimmer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Text		Text / Goto	
Recall / S.Page		Back / Return	
Index / PVR List		Smart / List	
Reveal / Rec		Rec / Rec Mode	
Zoom / T.Shift		Zoom / Size	

Originale	Sostituto	Originale	Sostituto
Hold / Auto	 + 	Shift + Stop /	
Hold / Auto		D.Menu / Top	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	
Vol +		Vol+	
Vol -		Vol-	
I - II		Audio / Lang I/II	
Source		AV / Input / RDS	
CH +		CH+ / Page+	
Freeze	 + 	Shift + Pause / Step /	
CH -		CH- / Page-	
Sleep		Sleep / Timer	
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
DTV / Radio		TV/Radio /	



































Originale	Sostituto
Aspect	 Shift + Picture / Format
Up	 Up
Left	 Left
OK	 OK
Right	 Right
Down	 Down
P.Mode	 Picture / Format
S.Mode	 Sound / Title
Media	 Display / Media
Info	 Info / Angle
Subtitle	 Subtitle / EQ
Play / Pause	 Play / Slow
I<<	 I<< / Preset-
Play / Pause	 Pause / Step / Freeze
>>I	 >>I / Preset+
Stop	 Stop / Hold
<<	 << / Tune-

Originale	Sostituto
>>	 >> / Tune+
Slow / FAV	 Fav / Marker / PC
A-B / Fav -	 Shift + Yellow / YouTube /
Repeat / Fav +	 Shift + Green / APP /
Repeat / Fav +	 Shift + Up
A-B / Fav -	 Shift + Down





Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Freeze		Pause / Step / Freeze	Pause / Step / Freeze
Swap		Back / Return	Back / Return
PIP		Eject / Surround	Eject / Surround
I-II		Audio / Lang I/II	Audio / Lang I/II
FAV.CH		Fav / Marker / PC	Fav / Marker / PC
[≡]		Text / Goto	Text / Goto
Mute		Mute / Dimmer	Mute / Dimmer
Sleep		Sleep / Timer	Sleep / Timer
P.Size		Zoom / Size	Zoom / Size
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7

Originale	Sostituto	Originale	Sostituto
8		8	8
9		9	9
0		0	0
Vol+		Vol+	Vol+
Jump		Setup / OPT /	Setup / OPT /
ENT		Smart / List	Smart / List
Vol-		Vol-	Vol-
Info		Info / Angle	Info / Angle
Source		AV / Input / RDS	AV / Input / RDS
CH+		CH+ / Page+	CH+ / Page+
Ch-		CH- / Page-	CH- / Page-
Exit		Exit / Cancel / Clear	Exit / Cancel / Clear
Menu		Menu / Home	Menu / Home
Up		Up	Up
Left		Left	Left
OK		OK	OK
Right		Right	Right



