



 

 
 

 

 

 

 

 
 


 

 




 

 

 





Originale	Sostituto
 Power	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-- / +10	 Shift + Guide
 Recall	 Back
 Mute	 Mute
 P.Mode	 Format
 S.Mode	 Shift + Dual

Originale	Sostituto
 Sleep	 Sleep
 Vol +	 Vol +
 Vol -	 Vol -
 Audio DVD /	 Dual
 USB / Card	 Media
 Aspect	 3D
 Info	 Info
 Source	 AV
 Menu / Exit	 Menu
 Rec	 Rec
 Subtitle	 Subt
 DVD Setup	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok





Originale	Sostituto
Red / Program	Red
Green / Goto	Green
Yellow / Angle	Yellow
Blue / Slow	Blue
Canales / Repeat	List
FAV / AB	Pre Ch
FAV +	Ch +
FAV -	Ch -
EPG / DVD	Guide
Play	Play
Pause / Mix	Pause
<< / Index	<<
>> / Size	>>
Stop / Clock	Stop
I<< / Hold	I<<
>>I / Subpage	>>I
Reveal	D. Menu

Originale	Sostituto
Teletext	Text
Tv/Radio	TV/R
Cancel	Exit
Still	Options

