



 

 
 

 

 

 

 

 
 


 

 




 

 

 






 

 

 

 
Originale	Sostituto
 Power	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-- / +10	 Shift + Guide
 Recall	 Back
 Mute	 Mute
 P.Mode	 Format
 S.Mode	 Shift + Dual

Originale	Sostituto
 Sleep	 Sleep
 Vol +	 Vol +
 Vol -	 Vol -
 Audio DVD /	 Dual
 USB / Card	 Media
 Aspect	 3D
 Info	 Info
 Source	 AV
 Menu / Exit	 Menu
 Rec	 Rec
 Subtitle	 Subt
 DVD Setup	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok





Originale	Sostituto
 Red / Program	 Red
 Green / Goto	 Green
 Yellow / Angle	 Yellow
 Blue / Slow	 Blue
 Canales / Repeat	 List
 FAV / AB	 Pre Ch
 FAV +	 Ch +
 FAV -	 Ch -
 EPG / DVD	 Guide
 Play	 Play
 Pause / Mix	 Pause
 << / Index	 <<
 >> / Size	 >>
 Stop / Clock	 Stop
 I<< / Hold	 I<<
 >>I / Subpage	 >>I
 Reveal	 D. Menu

Originale	Sostituto
 Teletext	 Text
 Tv/Radio	 TV/R
 Cancel	 Exit
 Still	 Options

