 

 



 

 

 

 

 





 






 




 





Originale	Sostituto
 Power	 Power
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 M Menu	 Menu / Home
 [i] Info	 Info / Angle
 OK	 OK
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 P < P	 Display / Media
 0	 0
 Aspect	 Picture / Format
 Swap	 Back / Return
 P - / CH -	 CH- / Page-
 P + / CH +	 CH+ / Page+
 Vol -	 Vol-
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 I - II	 Audio / Lang I/II
 [TV]	 Smart / List
 Source	 AV / Input / RDS
 Red / PIP	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto





	Originale	Sostituto		Originale	Sostituto
	Timer	TIMER SLEEP			
	Hold	HOLD			
	Cancel	CLEAR EXIT CANCEL			
	Mix	SHIFT + GOTO TEXT			
	Size	SIZE ZOOM			
	Help	OPT-TOOLS SETUP			
	Index	TOP MENU D.MENU			

