








Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Mute		Mute / Dimmer		-/--		Guide / EPG / -/--
	FAV / Eject		Fav / Marker / PC		Recall		Back / Return
	FAV / Eject		Eject / Surround		Setup		Setup / OPT /
	P.Mode		Picture / Format		Exit		Exit / Cancel / Clear
	S.Mode		Sound / Title		Call		Smart / List
	Sleep		Sleep / Timer		Source		AV / Input / RDS
	Scaler		Menu / Home		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		CH-		CH- / Page-
	6		6		CH+		CH+ / Page+
	7		7		Vol-		Vol-
	8		8		Vol+		Vol+
	9		9		Text / Play		Text / Goto





Originale	Sostituto
Text / Play	Play / Slow
Mix / Pause/Play	Pause / Step / Freeze
Index / Stop	Stop / Hold
I/II	Shift + Audio / Lang I/II
Cancel / <<	Shift + Exit / Cancel / Clear
Cancel / <<	<< / Tune-
Reveal / >>	>> / Tune+
Hold / I<<	I<< / Preset-
Hold / I<<	Shift + Stop /
Size / >>I	>>I / Preset+
Size / >>I	Zoom / Size
Red / Goto	Red / Netflix / Search
Red / Goto	Shift + Text /
Green / A-B	Green / APP / Repeat
Green / A-B	Shift + Yellow / YouTube /
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP / Repeat

Originale	Sostituto
Blue / Angle	Blue / Prime Video / Random
Blue / Angle	Info / Angle
S.Page /	D.Menu / Top
Page- / Title	Shift + Sound / Title
Page- / Title	Shift + CH- /
Page+ / PBC	Shift + CH+ /
Audio	Audio / Lang I/II
i / Display	Display / Media
Radio / Zoom-	TV/Radio /
Radio / Zoom-	Shift + Down
EPG / Zoom+	Shift + Up
EPG / Zoom+	Shift + Guide / EPG / -/-
S.Title / Subtitle	Subtitle / EQ

