



Originale	Sostituto	Originale	Sostituto
Power	Power	Down	Down
Info	Info	Right	Right
Subtitle	Subt	Left	Left
DTV/VCR	AV	1	1
CH+	Ch +	2	2
CH-	Ch -	3	3
Vol+	Vol +	4	4
Vol-	Vol -	5	5
Mute	Mute	6	6
Menu	Menu	7	7
Exit	Exit	8	8
EPG	Guide	9	9
FAV	Pre Ch	0	0
Page+	Shift + Ch +	TTX	Text
Page-	Shift + Ch -	Tv/Radio	TV/R
OK	Ok	Pause	Pause
Up	Up	Audio	Dual

Originale	Sostituto	Originale	Sostituto
Down	Down	Right	Right
Left	Left	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
TTX	Text	Tv/Radio	TV/R
Pause	Pause	Audio	Dual





Originale	Sostituto	Originale	Sostituto
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Recall	 Back		

