




 
















 



 
 

 
 


 

 

 

 





 


 
 

 
 












Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	Mute		Mute		OK		Ok
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Play		Play		1		1
	Pause		Pause		2		2
	<<		<<		3		3
	>>		>>		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Rec		Rec		7		7
	Stop		Stop		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		EPG		Guide







 








 



 
 
 




 

 

 


 




 

 

 


Originale		Sostituto	
	Back		Back
	Media		Media
	USB		Smart
	Tv/Radio		TV/R
	Audio		Dual
	TTX		Text
	Timer		AV
	FAV		Pre Ch
	Res		3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	Mute		Mute		OK		Ok
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	<<		<<		EPG		Smart
	>>		>>		Back		Back
	Play		Play		1		1
	Pause		Pause		2		2
	Record		Rec		3		3
	Stop		Stop		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	CH+		Ch +		7		7
	CH-		Ch -		8		8
	Up		Up		9		9





Originale		Sostituto	
	0		0
	Media		Media
	USB		Options
	Tv/Radio		TV/R
	Audio		Dual
	TTX		Text
	FAV		Pre Ch
	Timer		AV
	Res		Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originale		Sostituto	

