 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 AUTO	 Smart
 PIP	 Shift + Smart
 Exit	 Exit
 Go To / Text	 Text
 Audio I/II	 Dual
 Display	 Info
 Sleep	 Sleep
 P+	 Ch +
 P-	 Ch -
 V+	 Vol +
 V-	 Vol -
 Red / Input	 AV
 Red / Input	 Shift + Red
 Green / TV	 Menu
 Green / TV	 Shift + Green

Originale	Sostituto
 Yellow / PMode	 Format
 Yellow / PMode	 Shift + Yellow
 Blue / SMode	 Shift + Dual
 Blue / SMode	 Shift + Blue
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Originale		Sostituto		Originale		Sostituto	
	9		9		I<< / Subpage		I<<
	0		0		>>I / Lang		>>I
	-/-- / +10	+	Shift + Guide		Stop / FAV -		Stop
	Recall / Prog		Back		Stop / FAV -	+	Shift + Left
	Red / D.Setup		Red		<< / FAV		<<
	Red / D.Setup		Options		<< / FAV		Pre Ch
	Green / A-B		Green		>> / FAV+		>>
	Yellow / Angle		Yellow		>> / FAV+	+	Shift + Right
	Blue / Repeat		Blue		Eject / EPG		Eject
	Blue / Repeat	+	Shift + Text		Eject / EPG		Guide
	Subtitle		Subt		Media		Media
	Pause/Play / Hold		Play		Recorder		Rec
	Pause/Play / Hold		Pause		CH.List		List
	Size		3D		TV / Radio		TV/R
	D.Menu / Mix		D. Menu				
	D.Disp / Reveal	+	Shift + Info				
	Zoom / TXT Index	+	Shift + Eject				

