
 



 

 

 



 
























	Originale	Sostituto		Sostituto
	Function		Power	
	Language		Dual	
	Screen On/Off		Smart	
	Setup		Options	
	Vol+		Vol +	
	Vol-		Vol -	
	Mute		Mute	
	Info/Display		Info	
	Stop/USB/Card		Stop	
	DVD Menu		D. Menu	
	Title		List	
	Tv/Radio		TV/R	
	TTX		Text	
	CH+		Ch +	
	CH-		Ch -	
	Up		Up	
	Down		Down	

	Originale	Sostituto		Sostituto
	Right		Right	
	Left		Left	
	OK		Ok	
	Play		Play	
	Pause		Pause	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	EPG/Program/Angl		Guide	
	Zoom/Slow		3D	



