



Originale	Sostituto
On / Off	Power
Mute All	Shift + Mute
Mute	Mute
Stored	List
CD - DVD	Shift + 1
FM - AM	Shift + 2
TV	Shift + 3
CBL - SAT	Shift + 4
AUX	Shift + 5
VCR	Shift + 6
Up / Tune +	Up
Library	Text
Down / Tune -	Down
Left	Left
Right	Right
Enter	Ok
Settings	Options

Originale	Sostituto
System	Menu
DVD Menu	D. Menu
Guide	Guide
Exit	Exit
Volume +	Vol +
Volume -	Vol -
Track/Chap./CH +	Ch +
Track/Chap./CH -	Ch -
Stop	Stop
Pause	Pause
Play	Play
I<< Seek	I<<
>>I Seek	>>I
Shuffle	Smart
Repeat	Media
1	1
2	2





Originale

Sostituto

3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
Info	Info	DISPLAY INFO	Info
Last	Last	FAV PRE-CH	Pre Ch
uMusic	uMusic	SOUND DUAL	Dual
Rating-	Rating-	<<	<<
Rating+	Rating+	>>	>>
Encore	Encore	A	Red
CD #	CD #	B	Green
Playlist	Playlist	C	Yellow
Whole CD	Whole CD	D	Blue

 

 

Originale

Sostituto






Originale	Sostituto
 On / Off	 Power
 Mute All	 Shift + Mute
 Mute	 Mute
 Stored	 List
 CD - DVD	 Shift + 1
 FM - AM	 Shift + 2
 TV	 Shift + 3
 CBL - SAT	 Shift + 4
 AUX	 Shift + 5
 VCR	 Shift + 6
 Up / Tune +	 Up
 Library	 Text
 Down / Tune -	 Down
 Left	 Left
 Right	 Right
 Enter	 Ok
 Settings	 Options

Originale	Sostituto
 System	 Menu
 DVD Menu	 D. Menu
 Guide	 Guide
 Exit	 Exit
 Volume +	 Vol +
 Volume -	 Vol -
 Track/Chap./CH +	 Ch +
 Track/Chap./CH -	 Ch -
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 I<< Seek	 I<<
 >>I Seek	 >>I
 Shuffle	 Smart
 Repeat	 Media
 1	 1
 2	 2



