











 

 

 










 




























 


 
 
 

 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/R	 TV/Radio /
 SAT	 Shift + 0
 SAT	 Smart / List
 EPG	 Guide / EPG / -/--
 Menu	 Menu / Home

Originale	Sostituto
 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Red / Audio	 Red / Netflix / Search
 Red / Audio	 Audio / Lang I/II
 Green / Mode	 Green / APP / Repeat
 Yellow / Disp	 Yellow / YouTube / Repeat
 Yellow / Disp	 Display / Media
 Blue	 Blue / Prime Video / Random





Originale	Sostituto
Page+	Shift + CH+ /
Page-	Shift + CH- /
Recall	Back / Return
F1 /Info	Info / Angle
F1 /Info	Shift + 1
F2 / SUB	Subtitle / EQ
F2 / SUB	Shift + 2
F3 / Goto	Shift + Text /
F3 / Goto	Shift + 3
TXT	Text / Goto
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
Stop / USB	Stop / Hold
Stop / USB	AV / Input / RDS

Originale	Sostituto
Stop / USB	Shift + 8
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode

