 

 


 

 
 


 
 



 
 

 
 
 
 

 
 






 



 



 

 
 


 





 




 
 
 
 
 

 




 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Source		AV
	Mute		Mute		Subtitle		Subt
	TV / Radio		TV/R		Return		Back
	P-Mode		Format		Fav		Pre Ch
	S-Mode		Dual		Smart Hub		Smart
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit
	7		7		EPG		Guide
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Info		Info
	Menu		Menu		CH. List		3D
	Index		Media		CH+		Ch +





Originale		Sostituto		Originale	Sostituto
	CH-		Ch -		
	Play / Pause		Play		
	Play / Pause		Pause		
	<<		<<		
	>>		>>		
	Rec		Rec		
	Stop		Stop		
	I<<		I<<		
	>>I		>>I		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

