



Originale	Sostituto
P100	Guide / EPG / -/--
Power	Power
REV	Sleep / Timer
DOUB	Smart / List
1	1
2	2
3	3
Hold	Stop / Hold
4	4
5	5
6	6
SUB	Subtitle / EQ
Update	Display / Media
7	7
8	8
9	9
MIX	D.Menu / Top

Originale	Sostituto
AV	AV / Input / RDS
0	0
TV	TV/Radio /
P+	Up
P+	CH+ / Page+
Mute	Mute / Dimmer
TV/TXT	Text / Goto
Menu	Menu / Home
Vol-	Vol-
Vol-	Left
OK	OK
Vol+	Vol+
Vol+	Right
SWAP	Back / Return
P-	CH- / Page-
P-	Down
16:9	Picture / Format





Originale

Sostituto

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet/Info		Info / Angle
	[ ]		Zoom / Size
	PC		Fav / Marker / PC
	PT		Setup / OPT /

Originale

Sostituto


