














 

 

 
 
 


 








 






 

 

 



 


 
 

 
 


 



 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		Recall		Back
	DTV		Smart		EPG		Guide
	ATV		Media		FAV		Pre Ch
	FAV List		Shift + Pre Ch		Sound		Dual
	CH List		List		Stereo		Shift + Dual
	TV / Radio		TV/R		Picture		Shift + Format
	Aspect		Format		Vol +		Vol +
	1		1		Vol -		Vol -
	2		2		CH +		Ch +
	3		3		CH -		Ch -
	4		4		Mute		Mute
	5		5		Sleep		Sleep
	6		6		Input		AV
	7		7		Menu		Menu
	8		8		Up		Up
	9		9		Right		Right
	0		0		Down		Down



