


 





 


 



 

 

 


 



 


 
 


 



 





 

 

 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 List / Goto	 List
 Mute	 Mute	 Menu	 Menu
 Sleep	 Sleep	 Source	 AV
 P.Mode	 Shift + Format	 Aspect	 Format
 S.Mode	 Dual	 Recall	 Back
 Rec	 Rec	 Info	 Info
 DTV	 Smart	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 CH -	 Ch -
 6	 6	 CH +	 Ch +
 7	 7	 Vol -	 Vol -
 8	 8	 Vol +	 Vol +
 9	 9	 Audio	 Shift + Dual
 0	 0	 FAV / Title	 Pre Ch





Originale	Sostituto
Exit	Exit
EPG / Display	Guide
EPG / Display	+ Shift + Info
Index / I<<	I<<
Hold / >>I	>>I
Cancel / <<	<<
Size / >>	>>
TTX / A-B	Text
Mix / Play/Pause	Eject
Mix / Play/Pause	Play
Mix / Play/Pause	Pause
Subpage / Stop	Stop
Subpage / Stop	+ Shift + Subt
Subpage / Stop	Subt
Reveal / Eject	+ Shift + Exit
Freeze / Repeat	+ Shift + Pause
TV/Radio / Setup	Options

Originale	Sostituto
Freeze / Repeat	+ Shift + Text
TV/Radio / Setup	TV/R
Rec Menu /	+ Shift + Menu
Rec Menu /	D. Menu
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

