



 









 























Originale	Sostituto
 Standby	 Power
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Recall	 Back / Return
 Vol+	 Vol+
 CH-	 CH- / Page-
 Pause	 Pause / Step / Freeze
 Vol-	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/-

Originale	Sostituto
 Down	 Down
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 Page+	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 Page-	 Shift + CH- /
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Audio / Lang I/II
 Lang	 Shift + Audio / Lang I/II
 Tv/Radio	 TV/Radio /



