



Originale	Sostituto
POWER ON	Power
POWER OFF	+ Shift + Power
3D	3D
INVERT	Text
AUTO	Guide
UP	Up
ECO BLANK	+ Shift + 3D
LEFT	Left
OK	Ok
RIGHT	Right
DOWN	Down
BACK	Back
MENU	Menu
SOURCE	AV
MUTE	Mute
VOL-	Vol -
VOL+	Vol +

Originale	Sostituto
I<<	I<<
PLAY	Play
PAUSE	Pause
>>I	>>I
REW	<<
STOP	Stop
FWD	>>
KEYSTONE	0
MODE	Pre Ch
BRIGHT	1
CONTRAST	4
COLOR TEMP	3
FINE TUNE	Dual
GAMMA	5
COLOR	2
SHARP	6

