 












 







 




Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 M	 Menu / Home
 0	 0
 --	 Guide / EPG / -/--
 Vol-	 Vol-
 Vol+	 Vol+
 P-	 CH- / Page-
 P+	 CH+ / Page+

Originale	Sostituto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer
 Green	 Green / APP / Repeat
 AV	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat
 TV	 TV/Radio /
 Blue	 Blue / Prime Video / Random
 TXT	 Text / Goto

