 


 
 


 
 
 


 
 



 
 

 
 
 
 
 

 



 

 
 

 
 

 
 


 

 





 






Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Vol+		Vol +
	Open/Close		Eject		Vol-		Vol -
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Enter		Ok
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Red		Red
	9		9		Green		Green
	0		0		Yellow		Yellow
	Info/Display		Info		Blue		Blue
	Q-Play/Tv/Radio		TV/R		Next		>>
	Menu/PgDn		Menu		Prev		<<
	Setup		Options		Rew		<<
	Exit/Slow		Exit		FF		>>





Originale	Sostituto	Originale	Sostituto
 Play	 Play	 Random	 Sleep
 Stop	 Stop	 Mute	 Mute
 Pause	 Pause	 USB	 Smart
 Subtitle	 Subt		
 Audio	 Dual		
 List/PBC	 List		
 Title/PgUp	 D. Menu		
 Return	 Back		
 Rec/Repeat	 Rec		
 PVR/Zoom	 Shift + Eject		
 FAV/A-B	 Pre Ch		
 Video	 AV		
 TTX/Search	 Text		
 DVD/DVB	 Media		
 Step	 Format		
 EPG/P/N	 Guide		
 Angle	 3D		

Originale	Sostituto
 Random	 Sleep
 Mute	 Mute
 USB	 Smart

