












 


 
 


 
 
 


 



 

 

 

 
 


 



 




 
 


 





 

 
 










Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Mute		Mute		Menu		Menu
	FAV		Pre Ch		Exit		Exit
	Subtitle		Subt		Up		Up
	Info		Info		Left		Left
	TTX		Text		OK		Ok
	Recall		Back		Right		Right
	List		List		Down		Down
	1		1		EPG		Guide
	2		2		Timer		AV
	3		3		Pg Dn		Media
	4		4		Pg Up		Smart
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		<<		<<
	8		8		>>		>>
	9		9		I<<		I<<





	Originale	Sostituto	Originale	Sostituto
	>>I		>>I	
	CH+		Ch +	
	Ch-		Ch -	
	Play		Play	
	Pause		Pause	
	Stop		Stop	
	Audio		Dual	
	Rec		Rec	
	Sleep		Sleep	
	TV / Radio		TV/R	
	Aspect		Format	
	Red		Red	
	Green		Green	
	Yellow		Yellow	
	Blue		Blue	

