







 

 



 

 

 





 

 

 







 







 



 

 

 

 

 















 

 

 

 

 

 

 

 

 





 
 

 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Red / <<		<< / Tune-





Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Originale		Sostituto		Originale	Sostituto
	Green		Green / APP / Repeat		
	>>		>> / Tune+		
	Yellow		Yellow / YouTube / Repeat		
	I<<		I<< / Preset-		
	Blue		Blue / Prime Video / Random		
	>>I		>>I / Preset+		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	[≡]		Text / Goto		
	Stop/Still		Stop / Hold		
	[≡+]		Picture / Format		
	[≡o]/Subtitle		Subtitle / EQ		
	[≡◆]/[+]		Zoom / Size		
	[≡x]		Setup / OPT /		
	Radio		TV/Radio /		
	Audio		Audio / Lang I/II		
	Rec		Rec / Rec Mode		

