



| Originale | Sostituto |
|----------------|-----------|
| Power | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Recall | Pre Ch |
| Display | Info |
| P.Mode | Format |
| Text | Text |
| Red / PIP | Red |
| Green / Sub Ch | Green |

| Originale | Sostituto |
|--------------------|--------------|
| Yellow / Swap | Yellow |
| Blue / Main Ch | Blue |
| Up | Up |
| CH+ | Ch + |
| Down | Down |
| CH- | Ch - |
| Right | Right |
| Vol+ | Vol + |
| Left | Left |
| Vol- | Vol - |
| Menu | Menu |
| Menu | Ok |
| S.Mode | Shift + Dual |
| Mute | Mute |
| Zoom / Sub | 3D |
| Still | Back |
| O)▼/Audio / Reveal | Dual |





| Originale | Sostituto | Originale | Sostituto |
|-----------------|----------------|------------------------|---------------|
| Index Video | Video / Index | TIMER AV | AV |
| Hold S/Video | S-Video / Hold | SEARCH TV/R | TV/R |
| Size PC | PC / Size | SETTINGS OPT | Options |
| Cancel YPbPr | YPbPr / Cancel | CLEAR EXIT | Exit |
| Mix DM | DM / Mix | AD SUBT | Subt |
| Time | Time | SHIFT + TIMER AV | Shift + AV |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

