

 
 




 
 

 













Originale		Sostituto		Originale		Sostituto	
	Mute		Mute / Dimmer		Vol-		Vol-
	Power		Power		OK		OK
	1		1		Right		Right
	2		2		Vol+		Vol+
	3		3		Down		Down
	4		4		CH-		CH- / Page-
	5		5		Red		Red / Netflix / Search
	6		6		EPG		Guide / EPG / -/-
	7		7		Green		Green / APP / Repeat
	8		8		Audio		Audio / Lang I/II
	9		9		Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home		Subtitle		Subtitle / EQ
	0		0		Blue		Blue / Prime Video / Random
	Exit		Exit / Cancel / Clear		TTX		Text / Goto
	Up		Up		i		Info / Angle
	CH+		CH+ / Page+		FAV		Fav / Marker / PC
	Left		Left		Tv/Radio		TV/Radio /



Program



Originale	Sostituto
 Roll	 Smart / List
 Prog	 Shift + TV/Radio / Program
 Digest	 Display / Media
 Device	 Picture / Format
 Rec	 Rec / Rec Mode
 Zoom	 Zoom / Size
 Stop	 Stop / Hold
 Prev	 I<< / Preset-
 Next	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+

Originale	Sostituto

