



































Originale	Sostituto	Originale	Sostituto
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Left	 Left
1	 1	OK	 OK
2	 2	Right	 Right
3	 3	Down	 Down
4	 4	Menu	 Menu / Home
5	 5	Exit	 Exit / Cancel / Clear
6	 6	Vol+	 Vol+
7	 7	Vol-	 Vol-
8	 8	Aspect	 Shift + Picture / Format
9	 9	Auto	 Info / Angle
0	 0	CH+	 CH+ / Page+
Recall	 Back / Return	CH-	 CH- / Page-
Sleep	 Sleep / Timer	P.Mode	 Picture / Format
CH.List	 Smart / List	S.Mode	 Sound / Title
Source	 AV / Input / RDS	Display	 Display / Media
Audio / Nicam	 Audio / Lang I/II	Fav	 Fav / Marker / PC



Originale	Sostituto	Originale	Sostituto
TZT	 Text / Goto		
SUB	 Subtitle / EQ		
EPG	 Guide / EPG / -/--		
Size	 Zoom / Size		
Stop	 Stop / Hold		
I<< / Index	 I<< / Preset-		
>>I / S.Page	 >>I / Preset+		
Hold	 +  Shift + Stop /		
Play/Pause	 Play / Slow		
Play/Pause	 Pause / Step / Freeze		
<<	 << / Tune-		
>>	 >> / Tune+		
Reveal	 TV/Radio /		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

