 








 

 







 


 




 

 

 

 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Text	 Text
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Originale	Sostituto
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Source	 AV
 Display	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu





Originale	Sostituto
Exit	Exit
Subtitle	Subt
Index	List
Size	Format
Reveal	D. Menu
Play/Hold	Play
Pause	Pause
I<</Cancel	I<<
>>I/Subpage	>>I
Stop	Stop
Rec	Rec
FAV	Pre Ch
<</FAV-	<<
>>/FAV+	>>
Mix	Smart
EPG	Guide
Media	Media

Originale	Sostituto
Timeshift	Options
Tv/Radio	TV/R

