 








 






 
 
 







 
 
 
 

 










Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Reclist	 Smart
 Recall	 Pre Ch
 EPG	 Guide
 Subtitle	 Subt
 Audio	 Dual

Originale	Sostituto
 Display	 Info
 TV / Radio	 TV/R
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 FAV	 Shift + Pre Ch
 Rec	 Rec
 Media	 Media
 CH +	 Ch +
 CH -	 Ch -
 Source	 AV





Originale		Sostituto	
	P.Mode		Format
	S.Mode	 + 	Shift + Dual
	Sleep		Sleep
	Text		Text
	Reveal		3D
	Subpage	 + 	Shift + Subt
	Play/Pause / Timeshift		Play
	Play/Pause / Timeshift		Pause
	Stop		Stop
	Index	 + 	Shift + Info
	Size		Eject
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Red		Red
	Green		Green

Originale		Sostituto	
	Yellow		Yellow
	Blue		Blue

