
 

 




 
 

 


 

 
 
 
 




 



 
 
 
 

 
 


Originale	Sostituto	Originale	Sostituto
On/Off	 Power	T.Set/Clock	 Red
Audio Out	 Mute	OK Enter	 Ok
Slow Down	 +  Shift + Play	Menu Right	 Right
F.Adv	 OPT Options	Exit	 EXIT Exit
Stop	 Stop	Menu Down	 Down
Pause	 Pause	Tracking+	 Ch +
Auto/Track	 SMART Smart	Next	 >>
Slow/Dpss-	 - Vol -	Audio	 DUAL Dual
Sp/Lp/Speed	 BACK Back	Tracking-	 - Ch -
Mon/TV	 TV/R TV/R	1	 1
Video/Go-To	 D.MENU D. Menu	Prev.	 <<
Slow/Dpss+	 Vol +	2	 2
VCR/TV	 AV AV	3	 3
Menu	 MENU Menu	4	 4
Menu Up	 Up	5	 5
Display	 INFO Info	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8		8	
9		9	
-/--		Guide	
Vps/Pdc		Subt	
Next Sv+V		Blue	
0		0	
Progr/C/CH		Pre Ch	
Record		Rec	
Count Remain		Green	
Rewind		<<	
Audio Dub		Yellow	
Play		Play	
Encode		Media	
F.Forward		>>	
X2 Rew/Play		List	
P.Back/R. +Play		Sleep	
Info/Intro	 + 	Shift + Info	

