


 
 
 




 

| Originale | Sostituto |
|-----------|----------------------|
| | Power |
| | Mute |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | 0 |
| | Recall |
| | Vol+ |
| | Audio/Audio/Lang/MTS |
| | Exit/Exit |

| Originale | Sostituto |
|-----------|--------------|
| | P+ |
| | Vol- |
| | P- |
| | Up |
| | Left |
| | OK |
| | Right |
| | LCD Menu |
| | Down |
| | DVB Menu |
| | Input |
| | P.Mode |
| | S.Mode |
| | Sleep |
| | Info/Display |
| | Zoom/P.Ratio |
| | Tv/Radio |





| Originale | Sostituto |
|---|---|
|  FAV |  Fav / Marker / PC |
|  TTX |  Text / Goto |
|  Pause/Hold/Cancel |  Pause / Step / Freeze |
|  Cancel/USB/Card |  Shift + Exit / Cancel / Clear |
|  EPG/List |  Shift + Guide / EPG / -- |
|  Stop/Index/Stop |  Stop / Hold |
|  Size |  Shift + Zoom / |
|  Play/Play |  Play / Slow |
|  Reveal/Reveal |  Setup / OPT / |
|  Subtitle/Sub.PG |  Subtitle / EQ |
|  <</FR |  << / Tune- |
|  Red |  Red / Netflix / Search |
|  >>/FF |  >> / Tune+ |
|  Green |  Green / APP / Repeat |
|  I<</Prev |  I<< / Preset- |
|  Yellow |  Yellow / YouTube / Repeat |
|  >>I/Next |  >>I / Preset+ |

| Originale | Sostituto |
|--|---|
|  Blue |  Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

