



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Guide / EPG / -/--
0	0
Recall	Back / Return
Vol+	Vol+
Audio/Audio/Lang/ MTS	Audio / Lang I/II
Exit/Exit	Exit / Cancel / Clear

Originale	Sostituto
P+	CH+ / Page+
Vol-	Vol-
P-	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
LCD Menu	Shift + D.Menu / Top Menu
Down	Down
DVB Menu	D.Menu / Top
Input	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Info/Display	Info / Angle
Zoom/P.Ratio	Zoom / Size
Tv/Radio	TV/Radio /





Originale	Sostituto
FAV	Fav / Marker / PC
TTX	Text / Goto
Pause/Hold/Cancel	Pause / Step / Freeze
Cancel/USB/Card	Shift + Exit / Cancel / Clear
EPG/List	Shift + Guide / EPG / -/-
Stop/Index/Stop	Stop / Hold
Size	Shift + Zoom /
Play/Play	Play / Slow
Reveal/Reveal	Setup / OPT /
Subtitle/Sub.PG	Subtitle / EQ
<</FR	<< / Tune-
Red	Red / Netflix / Search
>>/FF	>> / Tune+
Green	Green / APP / Repeat
I<</Prev	I<< / Preset-
Yellow	Yellow / YouTube / Repeat
>>I/Next	>>I / Preset+

Originale	Sostituto
Blue	Blue / Prime Video / Random

