









 





 


 






 



 

 

 
 


 



 

 



 

 

 







 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		i/Info		Info / Angle
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Up		Up
	4		4		Q.Menu		D.Menu / Top
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		World		Smart / List
	Recall		Fav / Marker / PC		Music Photo		Display / Media
	Vol+		Vol+		Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer		*/o		Setup / OPT /
	PR+		CH+ / Page+		*/o..		Zoom / Size





Originale		Sostituto		Originale		Sostituto	
	≡/Text		Text / Goto				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Lang		Audio / Lang I/II				
	[≡]..		Subtitle / EQ				
	[-O-]		Picture / Format				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

