 

 


 

 



 
 

 
 










 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		1		1
	Source		AV		2		2
	YouTube		Media		3		3
	Netflix		Smart		4		4
	FPay		Shift + Smart		5		5
	Rec		Rec		6		6
	Play		Play		7		7
	Pause		Pause		8		8
	Stop		Stop		9		9
	Lang.		Dual		0		0
	<<		<<		TV		TV/R
	>>		>>		Recall		Pre Ch
	[≡]...		Subt		Menu		Menu
	Red		Red		WWW		Shift + Media
	Green		Green		Q.Menu		D. Menu
	Yellow		Yellow		Vol+		Vol +
	Blue		Blue		Vol-		Vol -





Originale		Sostituto		Originale		Sostituto	
	P+		Ch +				
	P-		Ch -				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Back		Back				
	Exit		Exit				
	[-O-]		Format				
	i		Info				
	FAV		Shift + Pre Ch				
	Mute		Mute				
	Music/Picture/Mov		Options				
	*/O		3D				
	[≡]		Text				
	Guide		Guide				

