




 
 
 
 


 
 




 
 

 


 
 
 
 

 


 




 



 
 
 




 
 
 
 
 
 
 
 

 
 
 
 
 






















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 Tv/Radio	 TV/R	 Left	 Left
 Play	 Play	 OK	 Ok
 Pause	 Pause	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 <<	 <<	 Mute	 Mute
 >>	 >>	 i	 Info
 Rec	 Rec	 P+	 Ch +
 Media	 Media	 P-	 Ch -
 Lang.	 Dual	 Red / PVR	 Red
 SUB	 Subt	 Green	 Green
 Guide	 Guide	 Yellow/Timer	 Yellow
 Menu	 Menu	 Blue	 Blue
 FAV.	 Pre Ch	 1	 1
 X/Exit	 Exit	 2	 2
 Up	 Up	 3	 3
 Down	 Down	 4	 4

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 <<	 <<	 >>	 >>
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	 AV
 TOP MENU	 MENU	 DISPLAY	 INFO
 OK	 OK	 Up	 Up
 CLEAR	 EXIT	 RETURN	 BACK
 VOL+	 HOME	 SMART	 CH +
 VOL-	 APP	 MEDIA	 CH -
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 A	 A
GUIDE	GUIDE	B	B
0	0	C	C
FAV	FAV	D	D
PRE-CH	PRE-CH	Mandis SHOP	Mandis SHOP
A	A	www.mandis.tv	www.mandis.tv



