



 












 




| Originale  | Sostituto   |
|--|---|
|  Vol+     |  Vol+                    |
|  Menu     |  Menu / Home             |
|  P+       |  CH+ / Page+             |
|  Vol-     |  Vol-                    |
|  Silence  |  Mute / Dimmer           |
|  P-       |  CH- / Page-             |
|  Up       |  Up                      |
|  Left     |  Left                    |
|  OK       |  OK                      |
|  Right    |  Right                   |
|  Down    |  Down                   |
|  Retour |  Back / Return         |
|  Pilote |  Guide / EPG / -/--    |
|  Sortie |  Exit / Cancel / Clear |
|  1      |  1                     |
|  2      |  2                     |
|  3      |  3                     |

| Originale  | Sostituto  |
|--|--|
|  4            |  4          |
|  5            |  5          |
|  6            |  6          |
|  7            |  7          |
|  8            |  8          |
|  9            |  9          |
|  TV/TNT       |  TV/Radio / |
|  0            |  0          |
|  Marche/Arret |  Power      |

