



Originale	Sostituto
	Power
	D.Menu / Top
	Mute / Dimmer
	TV/Radio /
	Vol+
	Text / Goto
	I<< / Preset-
	OK
	>>I / Preset+
	Sleep / Timer
	Vol-
	Sound / Title
	1
	2
	3
	4
	5

Originale	Sostituto
	6
	7
	8
	9

