
 
 




 

 
 






 

 


 
 


 

 


 




 
 
 


 
 
 








 
 





 
 
 

 

 

 
 
 

 

 
 

 

 

 


 





Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Media	Menu Off	 Exit
Reveal	 Smart	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 +  Shift + Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Rotate Text	 + 	Shift + Mute	
Tone-		<<	
On/Tim		Play	
Tone+		>>	
Off/Tim		Pause	
Mix Scan		List	
Store Text	 + 	Shift + Text	
Color+ P.Std		Format	
Game Coo	 + 	Shift + Eject	
Disp		3D	
AV 2	 + 	Shift + AV	
Bright+ Mode	 + 	Shift + Menu	
Tune-	 + 	Shift + Left	
Search	 + 	Shift + TV/R	
Aft/Caf	 + 	Shift + Ok	
Tune+	 + 	Shift + Right	
Bright- Sys	 + 	Shift + Exit	
Contrast+	 + 	Shift + Ch +	
Store		Options	
Color- S.Std		Dual	
Contrast-	 + 	Shift + Ch -	
4.# 16:9	 + 	Shift + Format	
3.*	 + 	Shift + Guide	
Surround	 + 	Shift + Red	
Nicam/Mono	 + 	Shift + Green	



Originale	Sostituto	Originale	Sostituto
Level L	 +  Shift + Yellow		
Level R/Woofers	 +  Shift + Blue		

